

ACCENSIONE IMPIANTO AUDIO

IMPORTANTE : prima di accendere l'impianto accertarsi che i volumi dei diffusori siano azzerati a sinistra e tutti i cursori del mixer siano azzerati verso il basso (LA MANCATA ESECUZIONE DI QUESTA OPERAZIONE PUO' CAUSARE DANNI ALL'IMPIANTO)

Dopo aver verificato che i volumi siano completamente azzerati premere il pulsante posto sul pannello posteriore del mixer e accenderlo



dopo aver verificato che tutti i volumi siano azzerati a sinistra (manopole con frecce gialle) accendere i diffusori con il pulsante on/off (freccia rossa) successivamente alzare il volume LINE e MASTER (frecce gialle immagine a dx)



Alzare il cursore del canale desiderato (freccia rossa) e successivamente entrambi i cursori MAIN (freccia gialla)



SPEGNIMENTO IMPIANTO

IMPORTANTE: PRIMA DI SPEGNERE L'IMPIANTO ABBASSARE I VOLUMI DEI DIFFUSORI AZZERANDO LE MANOPOLE DEI DIFFUSORI VERSO SINISTRA E I CURSORI DEL MIXER VERSO IL BASSO (LA MANCATA ESECUZIONE DI QUESTA OPERAZIONE PUO' CAUSARE DANNI ALL'IMPIANTO)

Ruotare le manopole dei volumi MASTER e LINE dei diffusori verso sinistra azzerandoli, successivamente premere il pulsante ON/OFF per spegnere



Azzerare tutti i volumi del mixer portando TUTTI i cursori verso il basso



premere il pulsante on/off sul pannello posteriore del mixer per spegnerlo



SWITCHING ON THE AUDIO SYSTEM

IMPORTANT: before switching on the system, make sure that the speaker volumes are zeroed to the left and all mixer sliders are zeroed down (FAILURE TO DO THIS MAY CAUSE DAMAGE TO THE SYSTEM)

After checking that the volumes are completely zeroed, press the button on the rear panel of the mixer and switch it on



after checking that all the volumes are zeroed to the left (knobs with yellow arrows)
switch the speakers on with the on/off button (red arrow)
then turn up the LINE and MASTER volumes (yellow arrows on the right)



Raise the slider of the desired channel (red arrow) and then both sliders MAIN (yellow arrow)



SWITCHING OFF THE SYSTEM

IMPORTANT: BEFORE SWITCHING OFF THE SYSTEM, TURN THE SPEAKER VOLUMES DOWN BY RESETTING THE SPEAKER KNOBS TO THE LEFT AND THE MIXER FADERS DOWN (FAILURE TO DO SO MAY CAUSE DAMAGE TO THE SYSTEM)

Turn the MASTER and LINE volume knobs of the speakers to the left resetting them to zero, then press the ON/OFF button to switch off



Reset all mixer volumes by moving ALL sliders downwards



Press the on/off button on the rear panel of the mixer to switch it off

